


bobbinwork

The use of heavier threads on the bobbin and all-forward decorative stitches for embellishment.


1. Wind the heavy thread on the bobbin by hand or machine. Insert the bobbin in the alternate bobbin case and adjust the tension screw to allow the thread to slide under the tension spring easily. Test sew on scraps of fabric to make sure the tension on the bobbin case is adjusted as desired. (#1)



2. When using built-in decorative stitches, select all-forward stitches to keep the threads from jamming. Draw a line or design on tear-away stabilizer and place face up on the wrong side of your fabric. Position the fabric and tear-away under your presser foot and begin to sew slowly following the line. (#2)

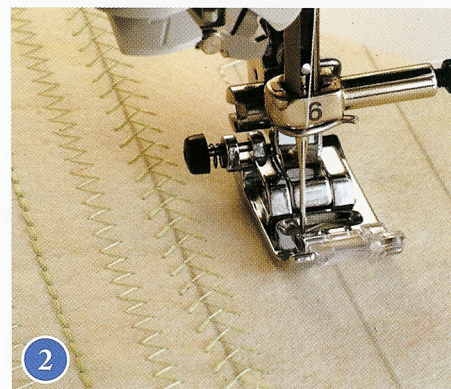

Monogram Foot or Free-motion Quilting Foot and Alternate Bobbin Case

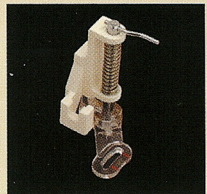

Stitch: As desired or straight for free-motion bobbinwork

Width: Pre-set

Length: Pre-set

Tension: Pre-set

Feed Dogs: Lowered for free-motion

Fabric, needles, notions required: Cotton solids and prints; universal or embroidery needle, size 80/12 or 75/11; heavy thread for bobbin and all-purpose polyester thread for needle; tear-away stabilizer; marking pen or pencil

TIP

Carefully remove and replace the needle plate and needle plate cover when using the alternate bobbin case. Turn the machine off, unscrew both screws and slide both pieces toward you. To replace the plate and plate cover, slide the needle plate into the slot on the left rear and line up the screw holes. Keep the plate and plate cover positioned to the front as you replace the screws. The screws should be centered and flush with the needle plate when inserted correctly.