
MODEL 5280B PARTS DRAWING.

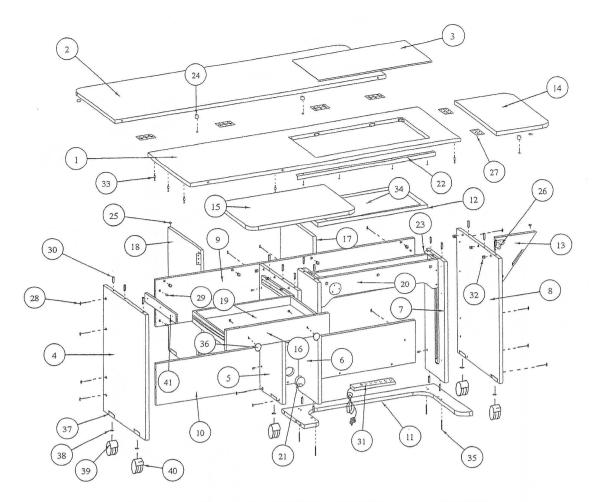


NOTE: WHEN ORDERING REPLACEMENT PARTS, PLEASE SPECIFY PART NUMBER_____ AND COLOR __

HORN OF AMERICA, INC. P.O. BOX 608 SUTTON, WV 26601 PH: (800) 882-8845

PART NO.	DESCRIPTION	QTY, REQ.	PART NO.	DESCRIPTION	QTY. REQ.
5280B-1	TOP	1	5280B-22	TOP SUPPORT RAIL W/SCREWS	1
5280B-2	DROP LEAF	1	5280B-23	2 1/2" BRACKET W/SCREWS	2
5280B-3	FILLER PANEL	1	5280B-24	NYLON STOP W/SCREW	3
5280B-4	LEFT SIDE PANEL	1	5280B-25	GLIDE TACK	3
5280B-5	MIDDLE PANEL	1	5280B-26	LEAF HINGE W/SCREWS	4
5280B-6	LEFT LIFT PANEL	1	5280B-27	BUTT HINGE W/SCREWS	12
5280B-7	RIGHT LIFT PANEL	1	5280B-28	CONNECTOR BOLT 2"	21
5280B-8	RIGHT SIDE PANEL	1	5280B-29	3/4" BARREL NUT	21
5280B-9	BACK	1	5280B-30	WOOD DOWEL	17
5280B-10	BOTTOM STRETCHER RAIL	1	5280B-31	ELECTRIC POWER STRIP W/SCREWS	1
5280B-11	BOTTOM PANEL	1	5280B-32	CAM LOCK	13
5280B-12	MOUNTING PLATFORM	1	5280B-33	CAM LOCK PIN	13
5280B-13	EXTENSION SUPPORT PANEL	1	5280B-34	NON-SLIP PAD	1
5280B-14	SWING UP EXTENSION PLATFORM	1	5280B-35	SCREW #8 X 1 1/8"	4
5280B-15	DRAWER EXTENSION PLATFORM	1	5280B-36	PULL W/SCREW	2
5280B-16	DRAWER FACE	1	5280B-37	"U" CASTER BRACKET	7
5280B-17	RIGHT SUPPORT PANEL	1	5280B-38	PLASTIC CASTER SOCKET	7
5280B-18	LEFT SUPPORT PANEL	1	5280B-39	NON-LOCK CASTER	3
5280B-19	DRAWER	1	5280B-40	LOCKING CASTER	4
5280B-20	REFER TO MODEL 12 PAPER	1	5280B-41	SOFT CLOSE DR GUIDE (SET) W/SCREWS	1
5280B-21	WIRING GROMMET	1			
J L U U U L I	MINING OROPHILE	1.			

MODEL: 12B ELECTRIC LIFT PARTS DRAWING

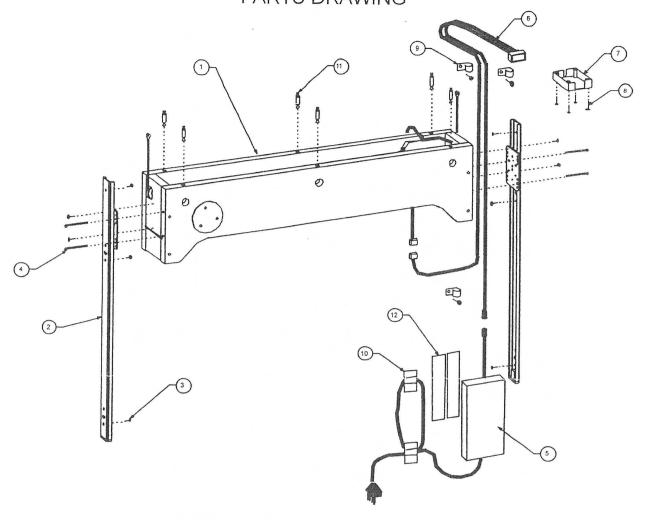


NOTE: WHEN ORDERING REPLACEMENT PARTS, PLEASE SPECIFY PART NUMBER______ AND COLOR____

ART NO.	DESCRIPTION	QTY.	PART NO.	DESCRIPTION	QTY.
12B-1 12B-2 12B-3 12B-4 12B-5 12B-6	ELECTRIC LIFT UNIT COMPLETE VERTICAL SLIDE RAIL VERTICAL SLIDE RAIL SCREW 50mm CONFIRMATE SCREW POWER TRANSFORMER MAIN WIRING HARNESS WITH SWITCH	1 2 10 4 1	12B-7 12B-8 12B-9 12B-10 12B-11 12B-12	SWITCH ENCLOSURE SWITCH ENCLOSURE SCREW CABLE CLAMP W/SCREW ADJUSTABLE ADHESIVE CABLE CLAMP CAM LOCK PIN VELCRO STRIP	1 4 3 2 6 2


HORN OF AMERICA INC. P.O. BOX 608, SUTTON, WV 26601 1-800-882-8845

MODEL 5280A ASSEMBLY INSTRUCTIONS


1. AFTER OPENING CARTON REMOVE
THE WOODEN PACKING FRAME
CAREFULLY! THE DRAWER EXTENSION
PLATFORM IS FASTENED INTO THE
WOODEN PACKING FRAME. REMOVE
THE DRAWER EXTENSION PLATFORM
AND SET ASIDE. DISCARD THE
WOODEN PACKING FRAME.
INSTALL CASTERS INTO CABINET
AS SHOWN IN FIGURE #1,
GENTLY ROLL CABINET OVER AND SET
UP ON ITS CASTERS.

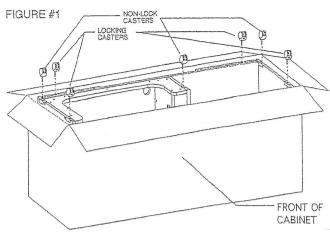

2. PULL DRAWER OUT AND SECURE
2-PULLS WITH 2- PULL SCREWS
AS SHOWN IN FIGURE #2. LIFT UP
DROP LEAF ON BACK OF CABINET
AND SWING OUT LEFT AND RIGHT
SUPPORT PANELS FOR SUPPORT.
LIFT UP- SWING UP EXTENSION
PLATFORM AND ROTATE THE
EXTENSION SUPPORT PANEL
OUT FOR SUPPORT. REMOVE
FILLER PANEL BY REMOVING
TAPE STRIPS WHEN UNPACKING.
TO REMOVE INSERT/FILLER PANEL
FROM TOP, PUSH UP FROM BOTTOM
SIDE AS SHOWN IN FIGURE #2.

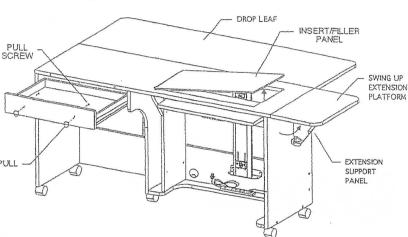

3. GET THE DRAWER EXTENSION
PLATFORM WHICH YOU SET ASIDE IN
STEP #1. PULL DRAWER
OUT COMPLETELY. ALIGN PINS
ON BACK EDGE OF DRAWER
EXTENSION PLATFORM TO RECEIVING
HOLES ON FRONT EDGE OF TOP.
LOWER DRAWER EXTENSION PANEL
ONTO DRAWER FRONT WHILE
ALIGNING PINS TO RECEIVING HOLES
AS SHOWN IN FIGURE #3.. THE
DRAWER EXTENSION PLATFORM FITS
TIGHTLY INTO RECEIVER HOLES.
WHEN INSTALLING USE FINGERS TO
PULL ON DRAWER FACE AND THUMBS
ON DRAWER EXTENSION PLATFORM
UNTIL PINS GO INTO PLACE.

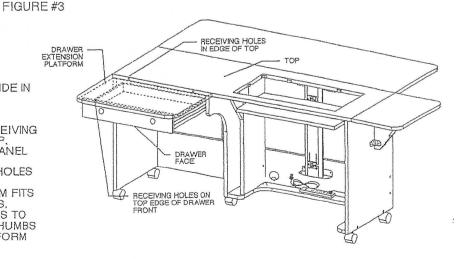

MODEL 5280A ASSEMBLY INSTRUCTIONS AIRLIFT VERSION

FIGURE #4

4. PUSH OUT WIRING GROMMET AND ROUTE POWER CORD THROUGH HOLE. PUSH WIRING GROMMET BACK IN PLACE. PLUG POWER CORD INTO POWER OUTLET.

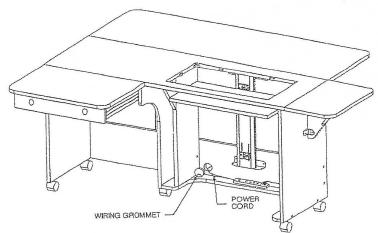


FIGURE #5

5. WHEN NOT IN USE, THE DRAWER EXTENSION PLATFORM, INSERT OR FILLER PANEL CAN BE STORED ON THE RIGHT SIDE PANEL AS SHOWN IN FIGURE #5.

