
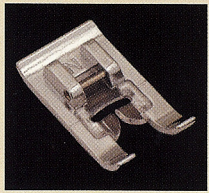
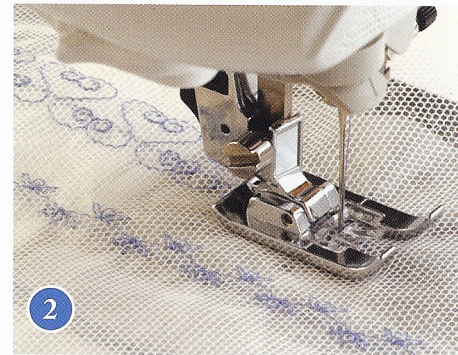


# lace-making

Lace created using built-in embroidery stitches.


1. Using the temporary spray adhesive, adhere two layers of water-soluble stabilizer. Draw placement lines on the stabilizer for stitching. Adhere the cotton netting to the layers of stabilizer. (#1)
2. Thread your machine with the embroidery thread. Center the layers of netting and stabilizer under the presser foot. Stitch following the drawn lines. (#2)
3. Following the manufacturer's instructions, rinse away the stabilizer from the netting; press without stretching.

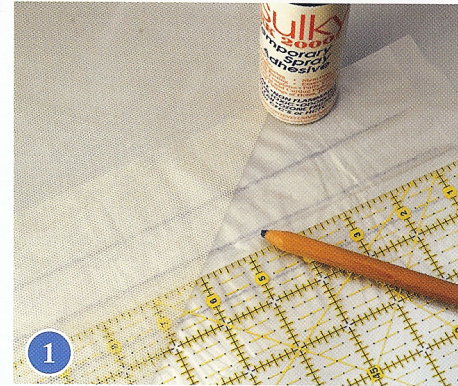

Monogram Foot

or

Open Toe Foot

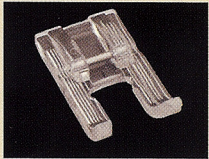

**Stitch:** Character or  
Decorative Stitches

**Width:** Pre-set

**Length:** Pre-set

**Tension:** Pre-set

**Fabric, needles, notions required:**

Cotton or bridal netting; universal or embroidery needle, size 70/10 or 75/11; 40 wt rayon or cotton embroidery thread for needle and bobbin; water-soluble stabilizer; temporary spray adhesive; marking pen

**TIP**

You can also use a twin needle to stitch on netting. Make sure to check that the needles do not hit the foot.