


seams — flat felled


An enclosed seam seen on the right side of the fabric.




1. With wrong sides together, offset the top fabric 1/4". Press down 3" to 4" along the edge over the top fabric. (#1)

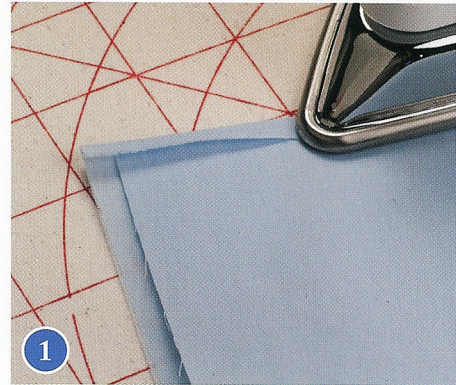



2. Place the fabric under the presser foot and lower the needle into the folded edge. Move the needle position to catch the left edge of the folded fabric. Take a couple stitches to hold. Leaving the needle in the fabric, carefully pull the pressed edge up and over the front edge of the foot. Keep the edge of the fabric turned over the foot as you sew. (#2)

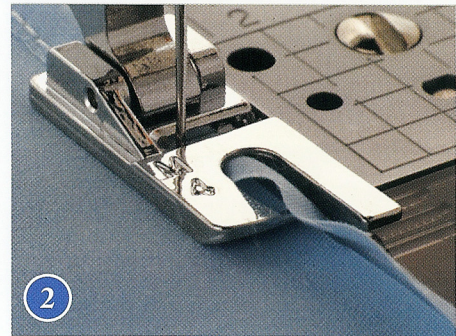

3. Open the seam and press the sewn edge over encasing the raw edge inside. (#3)

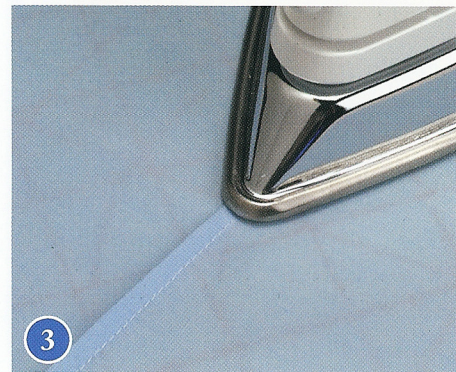

4. Lower the needle into the folded edge and take a couple of stitches. Leaving the needle in the fabric, pull the edge into the front of the foot and stitch again. The finished edge will have a double row of stitching on the outside.

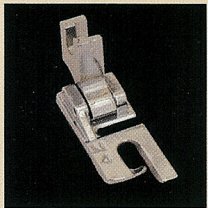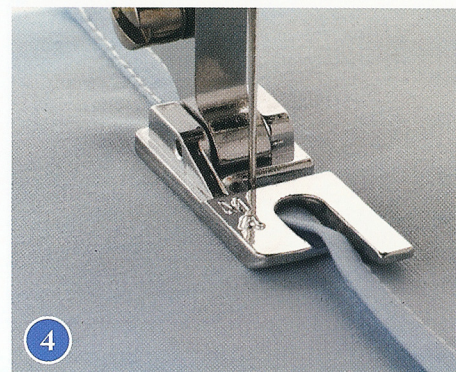

Felling Foot

Stitch: *Straight*

Width: *Pre-set*

Length: *Pre-set*

Tension: *Pre-set*

Fabric, needles, notions required:

Light- to medium weight fabrics; universal needle, size 80/12; all-purpose sewing thread for needle and bobbin