

SINGER® FUTURA™ Reversible Ornament Coaster



Create these cute reversible ornament coasters! With embroidery on one side and simple embellishment on the other, this coaster is perfect for the holiday season. Supplies listed below are for one coaster, so adjust the fabric requirements as needed for the number of coasters you want to make.

Shopping List:



- ☐ 12" x 12" piece of wool felt (back and front of coaster)
- ☐ 6" x 6" piece of quilting cotton (front of coaster)
- ☐ 2" x 2" piece of contrast quilting cotton (ornament tab)
- ☐ 2" x 2" fusible interfacing (Décor Bond recommended)
- ☐ ⅓ yard of ric-rac (or trim of your choice)
- ☐ ⅓ yard of double-sided fusible web (Steam-a-Seam recommended)
- ☐ All-purpose thread for construction
- ☐ Bobbin thread for embroidery
- ☐ Rayon embroidery threads
- ☐ Tear-away stabilizer
- ☐ Fabric marking tool
- ☐ Printed ornament template (see last page of these instructions. Template may need to be resized according to finished size of embroidery design)

Fabric Preparation:

1. Fuse the interfacing to 2" x 2" piece of contrast quilting cotton.
2. Cut 12" x 12" piece of wool felt in half.


Sewing Directions:

3. Choose your embroidery design from the SINGER® FUTURA™ sewing and embroidery machine. For the design used in this project, go to the main menu and select **File**, then select **Create**. Choose the **Design Library**. From the Large Hoop design collection, select design **359011**. Resize the embroidery design to the desired size. If desired, you can go to Tools in the main menu, then scroll down to Stitch Colors to preview thread color options before you start to embroider.
4. Thread the top of your machine with rayon embroidery thread, and thread the bobbin with bobbin thread.
5. Stitch out the embroidery design on one 6" x 6" piece of wool felt with tear-away stabilizer backing it.
6. Cut a 6" x 6" square of double-sided fusible web. Peel one side of paper backing away. Apply the fusible web to the wrong side of the 6" x 6" piece of quilting cotton. Trace ornament template onto the other side of the fusible web with paper backing. Cut along the edge of the traced design.
7. Peel away paper backing from fusible web backed quilting cotton. Fuse this onto a plain piece of 6" x 6" wool felt. Cut away the excess wool felt just beyond edge of the fused quilting cotton.
8. Thread your machine with all-purpose thread on top and in the bobbin. Topstitch the quilting cotton to the wool felt $\frac{1}{8}$ " inside the raw edge of the quilting cotton.

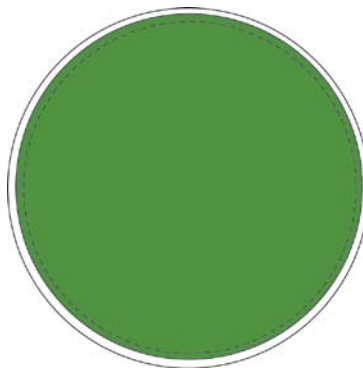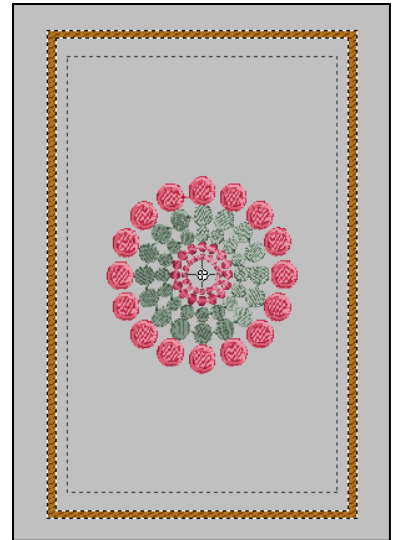


9. Cut the ric-rac into two 6" lengths Topstitch the ric-rac to the right side of the fused quilting cotton and wool felt piece, following the placement guidelines on printed ornament template and letting the excess of the ric-rac hang off the ornament evenly on each side.


10. Fold excess ric-rac to wrong side of fused quilting cotton and wool felt piece. Topstitch each folded end of ric-rac to secure.
11. Fold over and press $\frac{1}{2}$ " on two sides of 2" x 2" piece of contrast quilting cotton to wrong side. Fold in half lengthwise and press. Topstitch $\frac{1}{8}$ " along the edge of the folded tab.

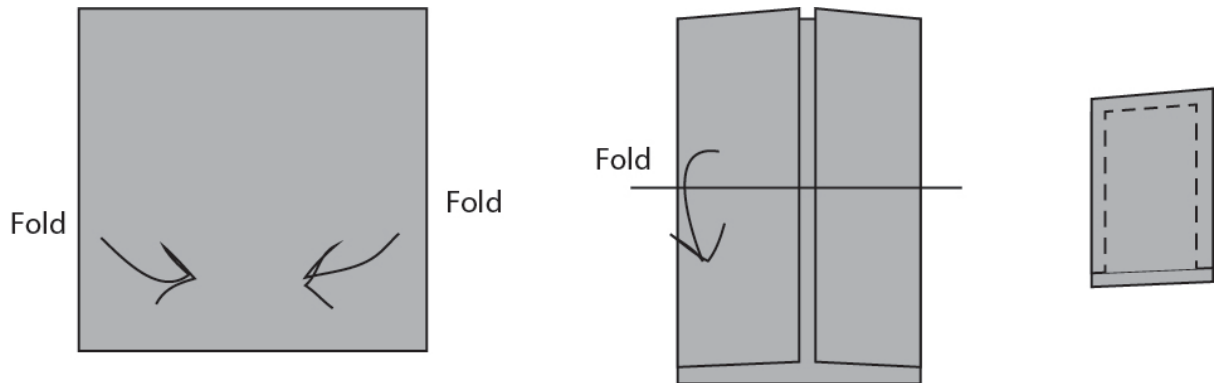

12. Cut another 6" x 6" square of double-sided fusible web. Peel one side of paper backing away. Fuse the web to the wrong side of the embroidered 6" x 6" piece of wool felt. Trace the ornament template onto other side of the fusible web with paper backing. Cut along the edge of the traced design.
13. Peel away the paper backing from the fusible web backed embroidered wool felt. With the raw edge of topstitched contrast tab placed $\frac{1}{4}$ " inside the edge of the wool felt, fuse the two ornament circles together.

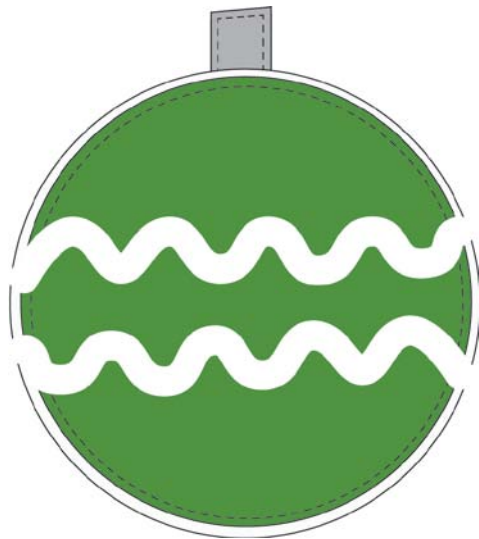

Ornament Template

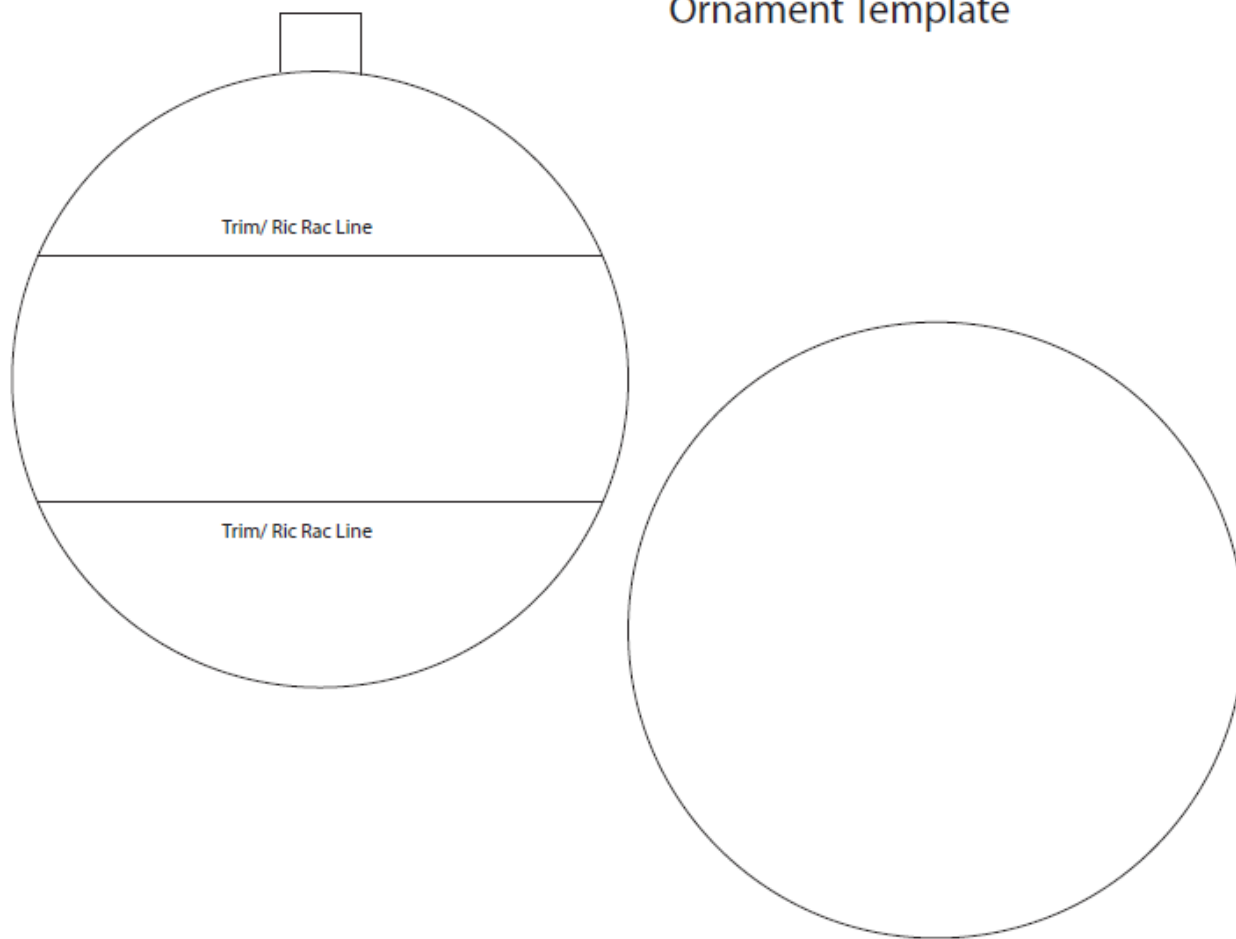

*NOTE: Template is for reference only.
Template will need to be resized according to
the finished size of the embroidery design.*

SINGER is sewing made easyTM