



Master the Basics

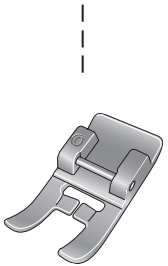
Accessories Included:

Standard presser foot 0, Clearview Foot 1, Blindhem foot 3, Zipper foot 4, One-Step Buttonhole foot 5B

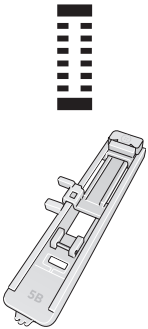
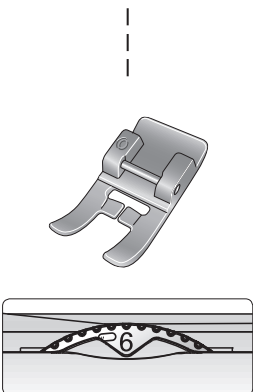
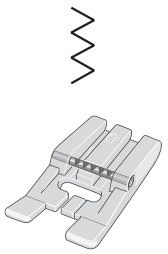

Sell up features from SMARTER BY PFAFF® 140s sewing machine:

- 23 stitches including utility stitches, decorative stitches, stretch stitches and a buttonhole.
- One-step buttonhole – snap on the buttonhole foot and sew repeatable buttonholes smoothly.

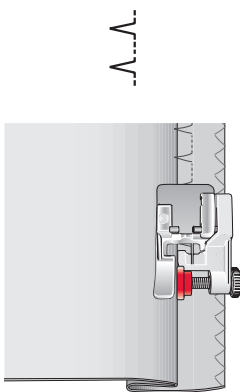
PHASE 1 – Basic Techniques

TECHNIQUE	SEWING	TALK ABOUT
<p>DEMO READY</p> <p>SEWS ALL TYPES AND WEIGHTS OF FABRIC</p> 	<p>FABRIC: Medium weight woven fabric, tricot and denim.</p> <p>SELECT: Turn dial to straight stitch.</p> <p>SET: Snap on the 0 foot.</p> <ul style="list-style-type: none"> • Stitch length: 2.5 • Stitch width: 0 • Tension: 4 <p>SEW: Fold fabrics in half.</p> <ul style="list-style-type: none"> • Sew a 5/8" (1.5cm) seam along the fold, kite tailing them together. Sew the medium weight woven fabric first, then tricot, then denim. • On the denim, Fold the seam to one side and topstitch to simulate a seam on a pair of jeans. • Fold up the "jeans" hem. • Sew the hem. 	<ul style="list-style-type: none"> • Your sewing is stress free and fun with PFAFF® - no matter what type of fabric you choose. • Sew over heavy denim or through lightweight tricot and any other fabric smoothly and effortlessly.

PHASE 1 – Basic Techniques

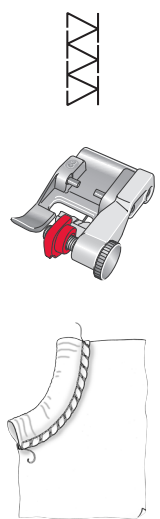
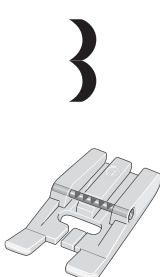
TECHNIQUE	SEWING	TALK ABOUT
<p>PROFESSIONAL BUTTONHOLES</p> 	<p>FABRIC: Medium weight woven fabric and stabilizer.</p> <p>SELECT: Turn dial to buttonhole.</p> <p>SET: Place your button in back of the buttonhole foot, 5B; snap on the foot.</p> <ul style="list-style-type: none"> • Stitch Length: buttonhole area • Stitch Width: 6 • Tension: 3 • Lower the buttonhole lever. <p>SEW: Fold fabric in half with stabilizer between the layers.</p> <ul style="list-style-type: none"> • Place the fabric under the presser foot. • Lower the presser foot and sew. Remember the buttonhole sews backwards first. 	<ul style="list-style-type: none"> • The PFAFF® One-step buttonhole foot creates perfect even buttonholes every time. • The size of the button will determine the length of the buttonhole. • Buttonhole density and width can be adjusted for different fabric types and weights. • Your SMARTER BY PFAFF™ 160s sewing machine makes it easy to repeat the same buttonhole over and over.
<p>MULTIPLE NEEDLE POSITIONS</p> 	<p>FABRIC: Medium weight woven fabric.</p> <p>SELECT: Turn dial to straight stitch.</p> <ul style="list-style-type: none"> • Stitch length: 2.5 • Stitch width: 0 • Tension: 4 <p>SET: Snap on the 0 foot.</p> <p>SEW: With a single layer of fabric, sew about 1" (2.5cm).</p> <ul style="list-style-type: none"> • Adjust the stitch width dial to 3 to move the needle to the left. Sew 1" (2.5cm). • Adjust the stitch width dial to 6 to move the needle to the farthest left position. Sew 1" (2.5cm). 	<ul style="list-style-type: none"> • Absolutely precise sewing is easy with your SMARTER BY PFAFF™ 160s sewing machine. • Multiple needle positions make it easy to sew precise seams and perfect topstitching, create piping or insert a zipper.
<p>APPLIQUÉ</p>  	<p>FABRIC: 2" (5cm) square of print quilter's cotton, 6" (15cm) square of medium weight woven fabric and stabilizer.</p> <p>SELECT: Turn dial to zigzag.</p> <ul style="list-style-type: none"> • Stitch length: Buttonhole area • Stitch width: 4 • Tension: 3 <p>SET: Snap on the Clearview Foot, 1.</p> <p>SEW: Place the print square in the center of the medium weight woven fabric with stabilizer underneath.</p> <ul style="list-style-type: none"> • Adjust your fabric so that the right swing of the needle is at the raw edge of the print square. • Sew down one side of the square. • Pivot. Sew the remaining three sides. 	<ul style="list-style-type: none"> • Do you like to appliqué? It is easy to do with your SMARTER BY PFAFF™ 160s sewing machine. • Stitch length and width are fully adjustable so you can easily achieve the finish that you want for your appliqué.

PHASE 1 – Basic Techniques

TECHNIQUE	SEWING	TALK ABOUT
<p>EASY BLINDHEM</p> 	<p>FABRIC: Medium weight woven wool.</p> <p>SELECT: Turn dial to blindhem stitch for woven fabrics.</p> <p>SET: Snap on the Blindhem Foot, 3.</p> <ul style="list-style-type: none"> • Stitch Length: 1 – 2 • Stitch Width: 5 • Tension: 3 <p>SEW: Fold up the hem on a piece of wool.</p> <ul style="list-style-type: none"> • Adjust the red guide as needed so you catch just a thread from the fold with the left swing of the needle. • Sew the blindhem with the fold riding along the red guide of the foot. 	<ul style="list-style-type: none"> • Your SMARTER BY PFAFF™ 160s sewing machine has two blindhem stitches - one for woven fabrics and one for stretch fabrics. • The Blindhem foot included with your accessories is adjustable and can be fine tuned for perfect invisible hems on many different fabrics. • The blindhem is great for garments and home décor. <p>• Would you like to see more?</p>

Continue to demonstrate using the techniques in Phase 2

PHASE 2 – More Techniques

TECHNIQUE	SEWING	TALK ABOUT
<p>SEAM AND OVERCAST STITCHES</p> 	<p>FABRIC: Sweatshirt fleece with an inside curve cut across one edge and one piece of ribbing, folded in half.</p> <p>SELECT: Turn dial to closed overcast stitch.</p> <p>SET: Snap on the Blindhem Foot, 3.</p> <ul style="list-style-type: none"> • Stitch length: S1 • Stitch width: 5 • Tension: 3 - 7 <p>SEW: Lay the ribbing onto the curved edge, stretching it slightly and matching the raw edges.</p> <ul style="list-style-type: none"> • Sew along the curved edge, with the right swing of the needle off the edge of the fabric. 	<ul style="list-style-type: none"> • The overcast stitches sew a seam and finish edges in one easy step. • Use the same stitch for seams on stretch fabrics. • Your SMARTER BY PFAFF™ 160s sewing machine has different overcast stitches so you can choose the right stitch for your technique.
<p>BUILT-IN DECORATIVE STITCHES</p> 	<p>FABRIC: Medium weight woven fabric with stabilizer.</p> <p>SELECT: Turn dial to the open scallop stitch.</p> <p>SET: Snap on the Clearview Foot, 1.</p> <ul style="list-style-type: none"> • Stitch length: buttonhole area • Stitch width: 6 • Tension: 3 <p>SEW: Sew a row of stitching down the middle of the fabric.</p> <ul style="list-style-type: none"> • Let the customer choose another stitch and sew. 	<ul style="list-style-type: none"> • Your SMARTER BY PFAFF™ 160s sewing machine has decorative stitches to make your project special. • Use specialty threads to give a whole different look to your stitches.