

ALL ABOUT


the zipper foot—standard and narrow

There are two traditional zipper feet available—a wide or a narrow foot. Each foot can be used for most zipper applications, simply and efficiently.


The wider foot provides more stability and covers the feed dogs better if your machine has a wide 7.0mm stitch width. This foot snaps on to either the right or left side of the needle bar. The narrow foot allows you to move closer to the zipper teeth and adjust your needle position accordingly. The narrow foot snaps on in the center position on the needle bar. *Be sure to select your stitch and needle position carefully so the needle does not hit the foot when sewing.*



These zipper feet can also be used to make and apply piping or welting that is too large to fit in the groove on the pearl and piping foot.

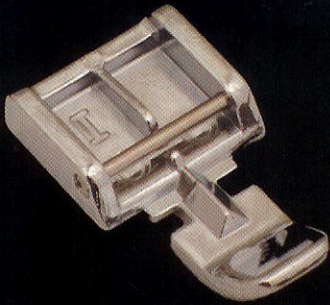

standard

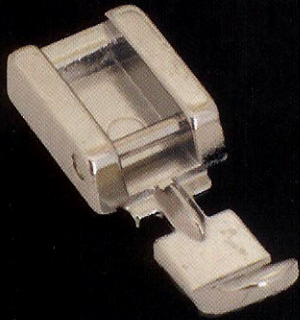

narrow

