


zippers — center

A zipper application with the zipper centered between two lips of fabric.

1. Sew the seam to the point where the zipper will be placed. From that point on baste the seam closed. Press the seam open and center it over the zipper teeth extending the zipper beyond the seam. (#1)




2. Snap on the zipper foot and place the edge against the seam. Adjust the needle position so it does not hit the zipper teeth or the presser foot. Sew from the top down one side, across the bottom and up the other side keeping the stitching distance even on both sides of the seam. (#2)

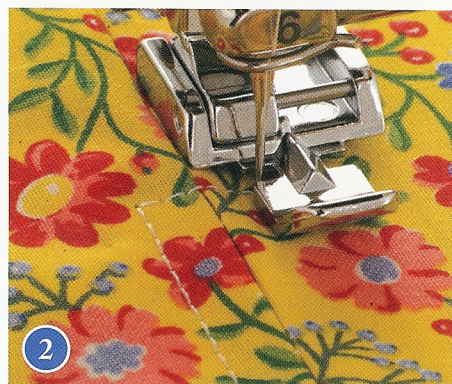

Zipper Foot

or

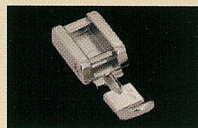

Narrow Zipper Foot

Stitch: *Straight*

Width: *Pre-set*

Length: *Pre-set*

Tension: *Pre-set*

Fabric, needles, notions required:

Fabrics of choice; zipper one size longer than required; universal needle, size 80/12; all-purpose sewing thread for needle and bobbin

FOOT FACTS

The wider zipper foot attaches to the presser foot holder on the right or left side for more accuracy when used. The narrow zipper foot attaches to the presser foot holder in the center so a center needle position is not possible. The needle will hit the foot.